SHORE VANS
CORNWALL

CURTAIN FITTING GUIDE

YOU WILL NEED:

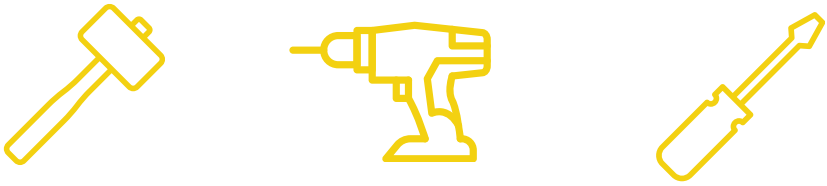

EACH CURTAIN KIT CONTAINS:

- 2 x Rails
- 2 x Fabric
- 1 x Fitting Kit (4 end caps, screws & spare clips)

FITTING GUIDE

1

Fit the 4 end caps to the rails to ensure rail ends are sufficiently open. Then remove two left side end caps.

2

Line the rail up centrally in the window. Drill through a central hole and insert screw to hold rail in place.

3

If required, gently, using a rubber mallet, tap the rail, moulding into the curves of the van.

4

Insert the remaining screws along the rail. Repeat for the upper rail. Continue until the rails are fully attached.

5

Hold up the fabric to ensure the correct orientation (tie back should be closest to the window edge).

6

Glide the hooks through the rails, attaching the curtains to the van.

6

Continue until both curtains are in place.

7

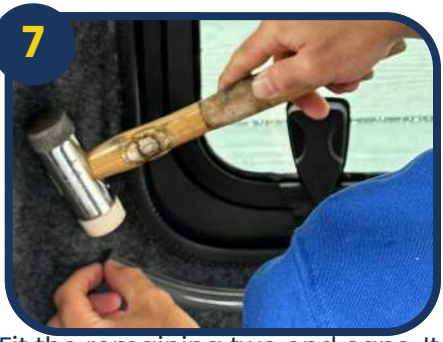

Fit the remaining two end caps. It may help to loosen off the closest screw.

8

Attach the male poppers to the van - ensuring they line up with those attached to the curtain fabric.

9

Move your curtains across to their finished location and admire your handiwork!

TROUBLESHOOTING

Problem	Solution
Rails don't fit/the curvature of the rails does not match my van.	In some cases the rails may not align with your van perfectly, however the rails are constructed of a soft aluminium and can be easily moulded during the fitting process at stage 3.
The fabric is too short.	Our fabric is designed to stretch and be pulled taught. This ensures there is very little movement or flapping as the vehicle is moving.
My poppers are missing from my order.	Both sides of the poppers are attached to the curtain fabric.

CURTAIN FITTING VIDEO

Instructions:

1. Open your phone's camera app.
2. Point it at the QR code.
3. Tap the notification to view our fitting video.

www.shorevans.co.uk/fitting-guides/